


- SPARE NOB.:**
- SIGNALS (S1 TO S23) >** S1, S6, S6, S7, S8, S11, S12, S13, S16, S17.
- POINTS (101 TO 118) >** 104, 105, 106, 107, 108, 109, 110, 111, 112, 115.
- TICKETS (201T TO 267T) >** 205T, 206T, 207T, 212T, 213T, 214T, 216T, 218T, 221T, 222T, 226T, 228T, 231T, 232T, 233T, 234T, 242T, 243T, 244T, 246T, 248T, 247T.

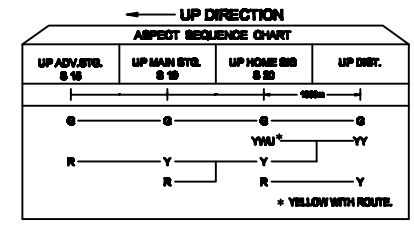

SIGNAL & TELECOMMUNICATIONS

ukx.klqj वकी सज़न
lapky fu; e vkj[k

NAGANSUR PHASE (B.G)
STATION WORKING RULE DIAGRAM

* [k * Jg.kh] ekud AA ¼vkj[k] 'B' CLASS, STD. II (B)
ELECTRONIC INTERLOCKING

C.R.Y. SUR. DIV. NOT TO SCALE
BASED ON C. RLY. DRG. S.I.P. No-6227/82

REV: 17