



SPARE
SIGNALS :- S1,S4,S10,S20,S28,
(S1 TO S70) ,S34,S35,S45,S46,S50,S54,S55,S60,S66,S69,S70.
POINTS :- 110,116,118,124,148,150,155,158,160,141.
(101 TO160)
T/CKTS
(201 TO 325):- 219T,259T,260T,270T , 291T ,310T,311T,
320T,324T,325T.

